## **B747 Emergency Procedures**

APU Fire	APU Fire Switch PULL     Fire Bottle DISCHARGE
Cabin Warning or Rapid	Oxygen Masks and Regulators ON, 100%
Depressurization	
Door Light Side, Fwd, Aft	2. Takeoff-Pack Valve Switches CLOSE
Electrical Smoke or Fire	<ol> <li>O2 Masks and Regulators ON, 100%</li> <li>Smoke Goggles On</li> <li>Crew Communications ESTABLISH</li> </ol>
<b>Emergency Descent</b>	1. Ignition (Sys 1 or Sys 2) FLT START
Engine Fire, Severe Damage or Separation	<ol> <li>Thrust Lever IDLE</li> <li>Start Lever CUTOFF</li> <li>Engine Fire Switch PULL</li> <li>Fire Bottle DISCHARGE</li> <li>After 30 Seconds if Switch Remains Illuminated         Other Fire Bottle DISCHARGE</li> <li>Test the Fire System, &amp; Align the Thrust Lever</li> </ol>
Loss of All Generators	Battery CHECK ON     Standby Power CHECK ON     Fuel Crossfeed Valves OPEN
Multiple Engine Shutdown / Restart	<ol> <li>Main Boost Pump Switches ON</li> <li>Standby Ignition Switch IGN 1 or IGN 2</li> </ol>
Smoke Removal	<ol> <li>O2 Masks and Regulators ON, 100%</li> <li>Smoke Goggles ON</li> <li>Crew Communications ESTABLISH</li> <li>Smoke Barrier Door CLOSED</li> </ol>
Start Valve Fails to Close,Open Light Illuminated, Condition Actuator light Disagrees with Start Lever Position, Tailpipe Fires, Aborted Start, Overtemp on Ground	Engine Start Lever CUTOFF
TR Deployment in Flight with Yaw, Loss of Airspeed, Buffet and/or Lever restricted at Idle	Thrust Lever IDLE     Start lever CUTOFF
Unscheduled Stab Trim	Stab Shutoff Switches CUTOUT
Wheel Well Fire	Landing Gear (At or Below Placard Speed) DOWN